



- | | |
|--|--|
| 1. Handgrip- TRHG | 14. Caster Bearing- STDS1011 |
| 2. Back Upholstery 17"- STDS2349BLK
Back Upholstery 19"- STDS2351BLK | 15. Caster Axle- STDS1002-1 |
| 3. Push Handle Silver Vein- STDS4S3601 | 16. Caster- STDS3J2432 |
| 4. Back Uphol. Screws (8 ea)- STDS5D5504 | 17. Fork- STDS3J4533 |
| 5. Release Lever- STDS4S1503 [2] | 18. Fork Stem Bearing- STDS8M4601 |
| 6. Seat Rail Guide- STDS1070 | 19. Hanger pins (4 ea)- STDS5D1069 |
| 7. Wheel Lock Left- STDS4S092L
Wheel Lock Right- STDS4S092R
Wheel Lock Tip- STDS4011 | 20. Seat Upholstery 17"- STDS2348BLK
Seat Uphol 19"- PL-STDS2350BLK [1] |
| 8. Tipping Sleeve- STDS4020 | 21. Seat Uphol. Screws (8 ea)- STDS1072-8 |
| 9. Rear Wheel Bearing- STDS4S3602 | 22. Dust Cap- STDS4S3606 |
| 10. Hub Cap- STDS4S3603 | 23. Arm Pad- STDSFLVB |
| 11. Rear Axle- STDS4S3604 | 24. Arm Pad Screw- STDS002001 |
| 12. Rear Wheel- STDS4S3605 | 25. Axle Spacer- [1] |
| 13. Axle Cap- STDS001000 | 26. Footrest (pr)- TR39SF-SV |
| | 27. Seat Belt- STDS850-PB |

[1] Part is no longer available.

[2] Part now uses a plastic release handle.